

# 811020 Honda MSX 125 (Grom) Shock Shield Fitting Instructions **PYRAMID**

Kit Includes:

1X	C24444	Rubber Flap
1X	CFK811020	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Stainless Washer
2X	CBOLM80011	M8 X 30mm Stainless Button-head Bolt
4X	CSPAM80002	Spacer

Fitting this Pyramid shock shield is quick and simple. Remove the bolt hole caps fitted on the bike.

Attach the rubber flap to the bracket using the M5 fittings supplied (see **illustration**).


Attach the bracket to the bike using the M8 bolts + spacers supplied (see **illustration**).

Check fixings periodically.

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

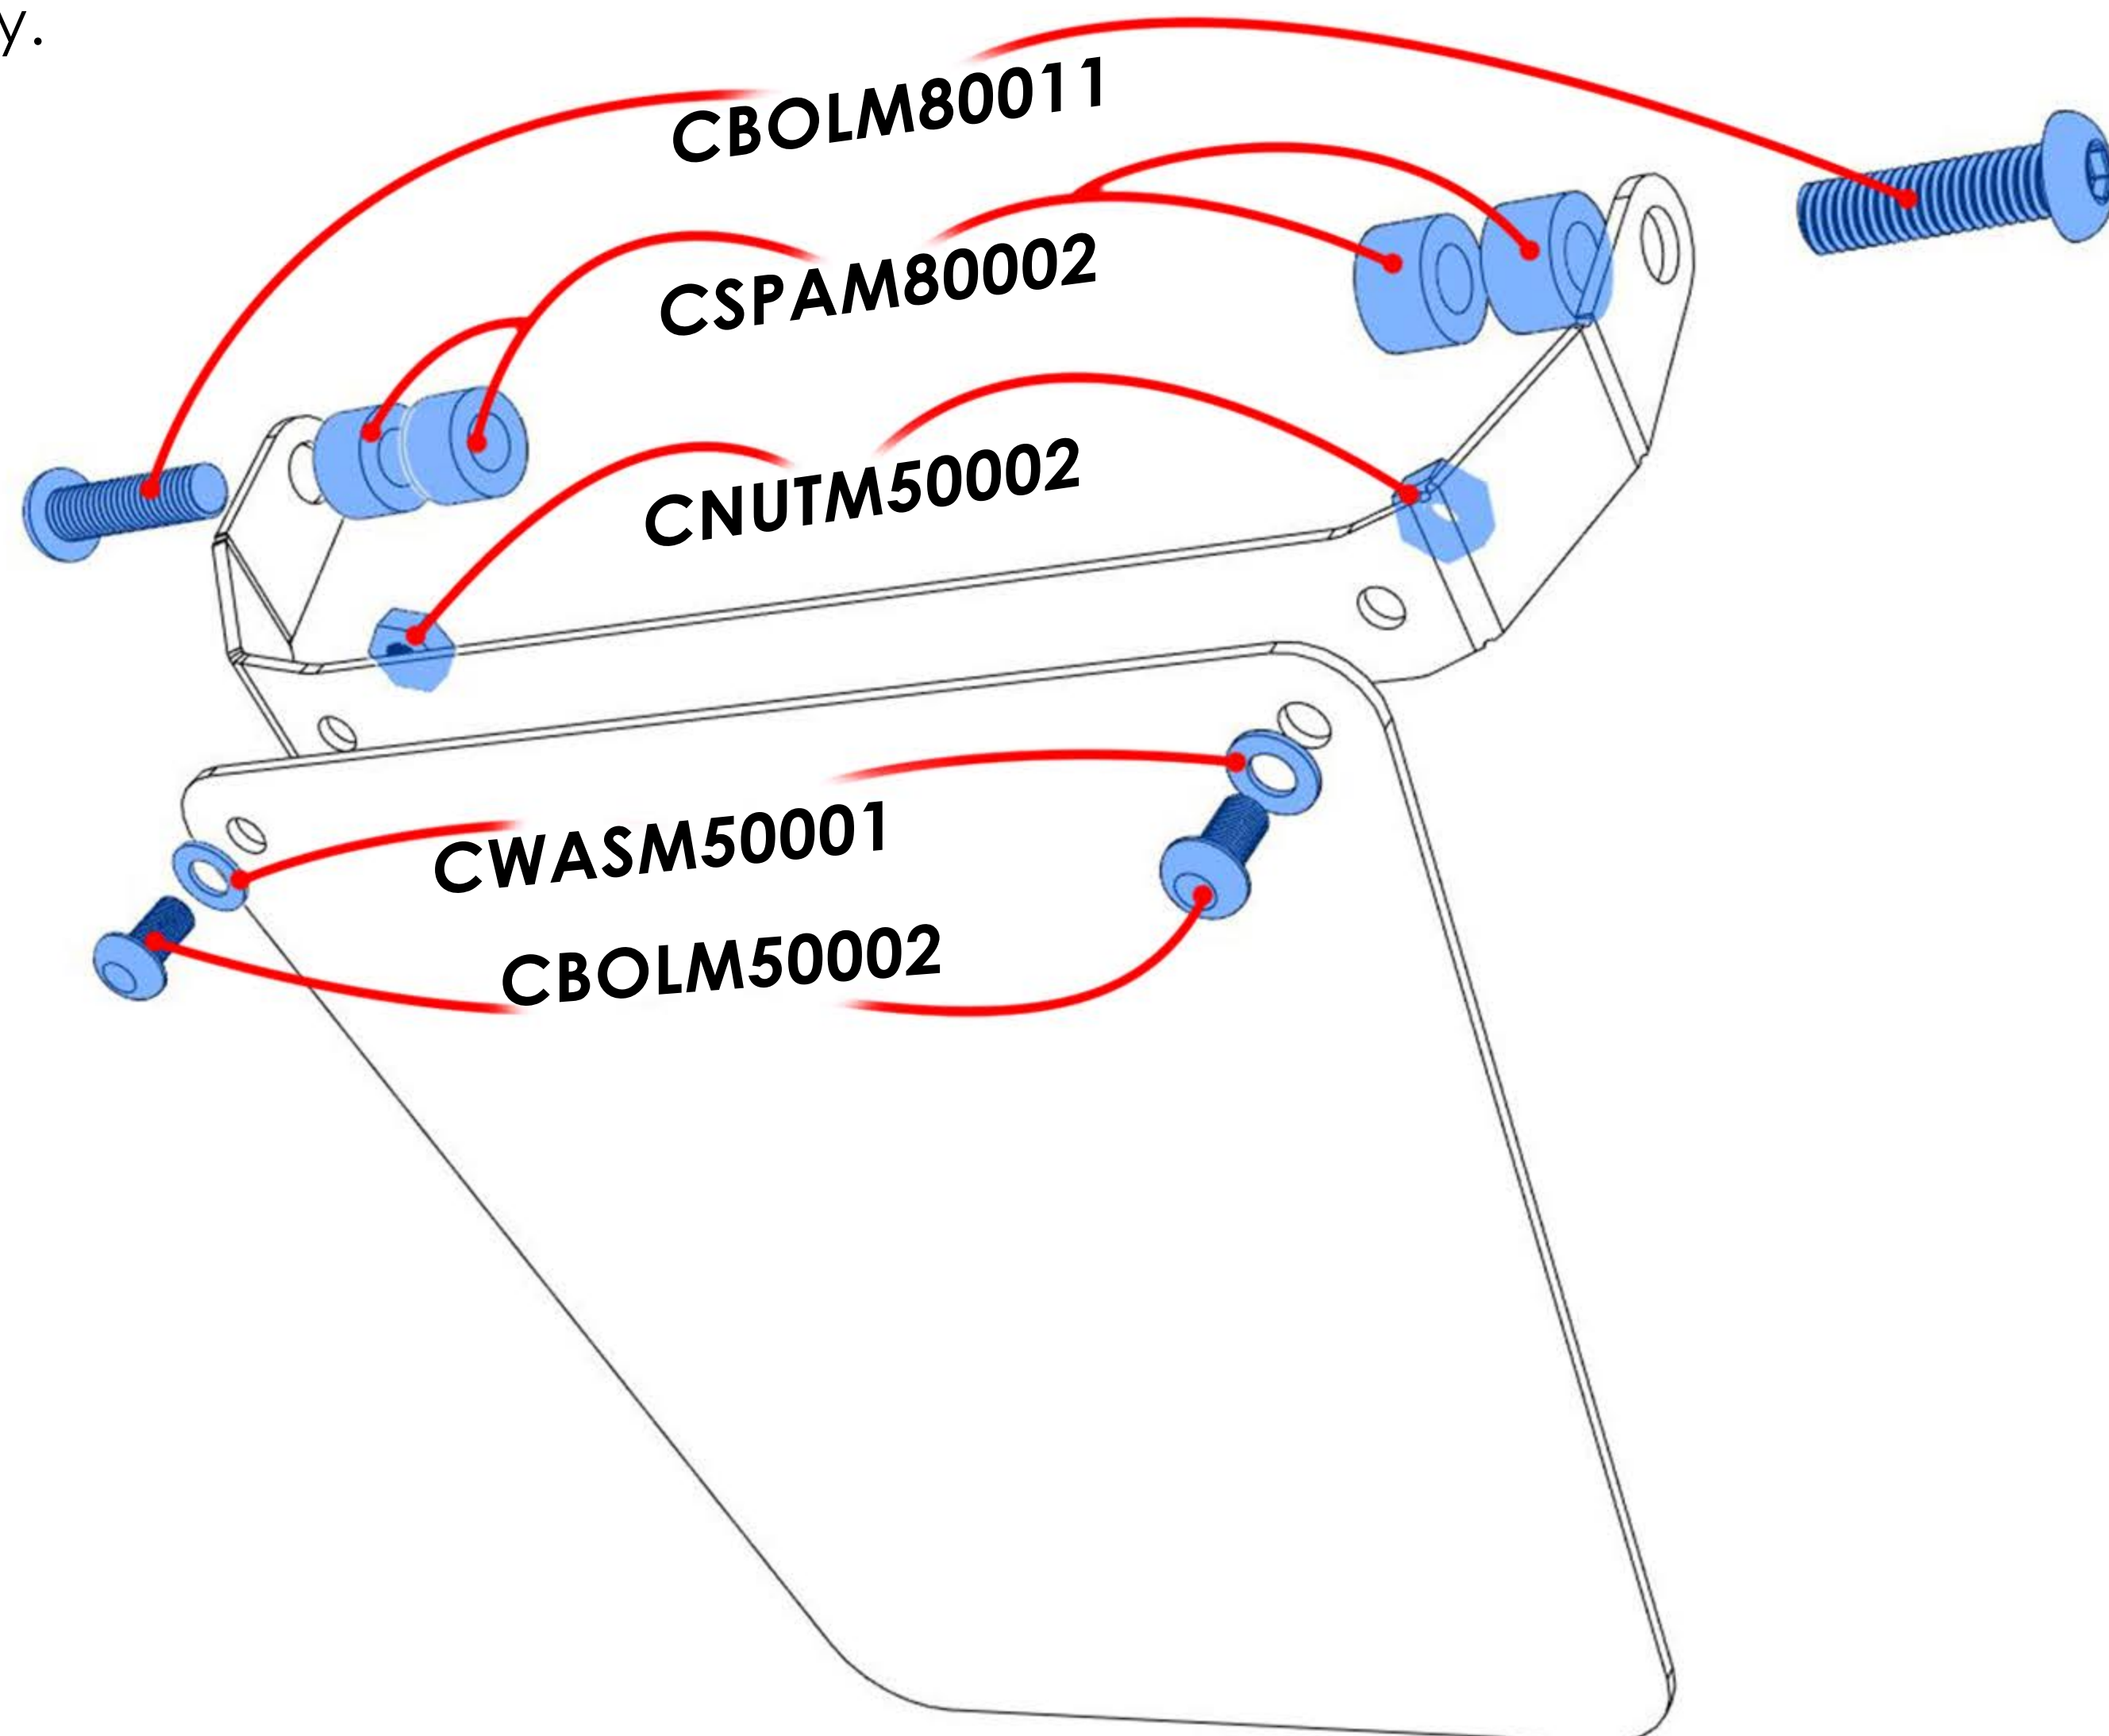

# 811020 Honda MSX 125 (Grom) Shock Shield Fitting Instructions **PYRAMID**

Kit Includes:

1X	C24444	Rubber Flap
1X	CFK811020	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Stainless Washer
2X	CBOLM80011	M8 X 30mm Stainless Button-head Bolt
4X	CSPAM80002	Spacer

Fitting this Pyramid shock shield is quick and simple. Remove the bolt hole caps fitted on the bike.

Attach the rubber flap to the bracket using the M5 fittings supplied (see **illustration**).

Attach the bracket to the bike using the M8 bolts + spacers supplied (see **illustration**).

Check fixings periodically.

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

