


Note: This drawing is not to scale. Components are enlarged for illustrative purposes only.

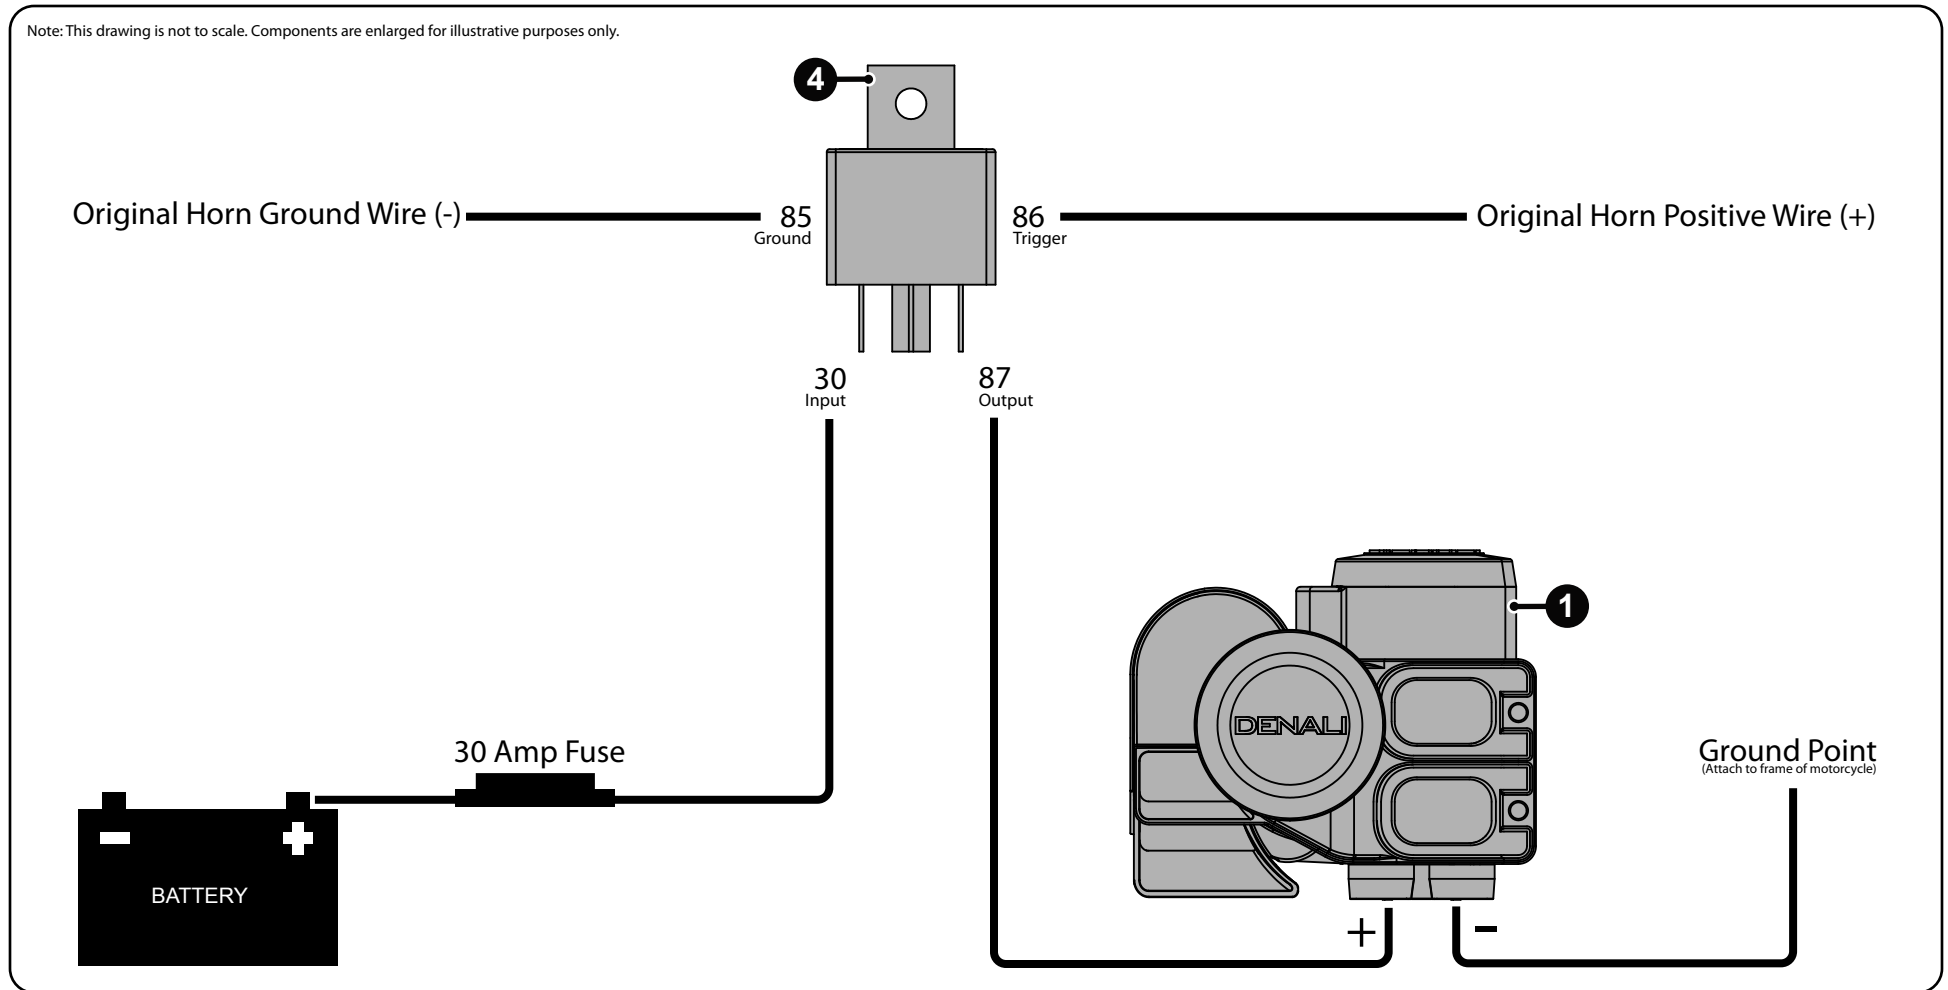

How to Wire:

1. Connect terminal 85 to the original horn ground wire (-)
2. Connect terminal 30 to the battery positive terminal (+). Do not install the fuse at this time.
3. Connect terminal 87 to the positive terminal (+) located on the bottom of the SoundBomb horn
4. Connect a ground wire from the negative terminal (-) located on the bottom of the SoundBomb horn, to a ground point on the motorcycle.
5. Connect terminal 86 to the original horn positive wire (+)
6. Install a 30 amp fuse in the fuse holder